


## Disconnecting the Door from the Opener

- 1 With the door in any position (preferably closed), carefully pull the red release handle. **USE CAUTION IF THE DOOR IS OPEN; THE DOOR MAY DROP.**
- 2 The disconnected door can be opened or closed manually.
- 3 To reconnect the opener, flip the release lever up. Raise or lower the door manually until the opener reconnects.

IN CASE OF POWER FAILURE  
OR IF DOOR BECOMES OBSTRUCTED

PULL THE RED  
RELEASE HANDLE  
TO DISCONNECT  
THE OPENER FROM  
THE DOOR

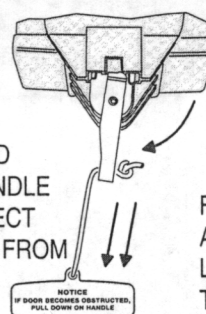

FLIP THE LEVER UP  
AND RAISE OR  
LOWER THE DOOR  
TO RECONNECT  
THE OPENER

